


Engine Failure on Take-Off Profile

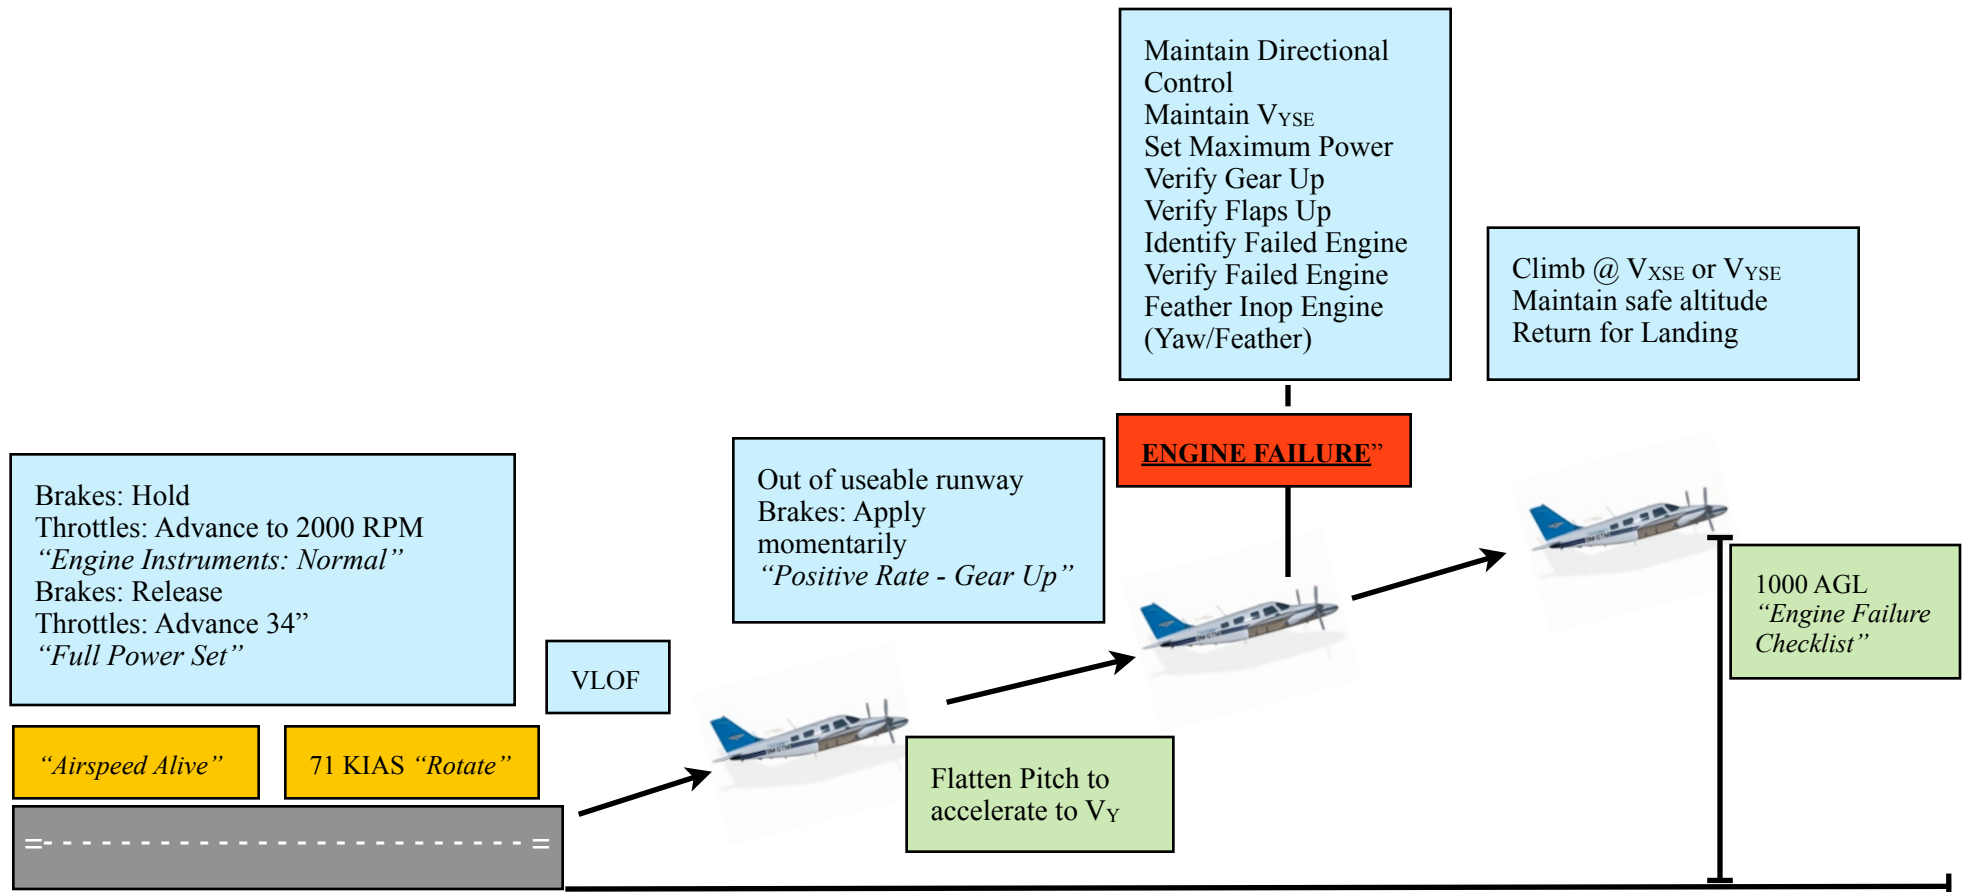

Note: Various combinations of density altitude and aircraft gross weight may make a climb out on one engine impossible.

- If the gear is still down accomplish a landing straight ahead.

If the gear is up or in transit, and IAS is V_{YSE} or above, use the above profile.